
## TECHNO CNC VISION SYSTEM

This document details how to install the Camera Drivers and Library of IC camera.

These instructions need to be followed before the Techno Vision software it installed.

It is assumed that the camera is connected to the computer through a functiong firewire connection.

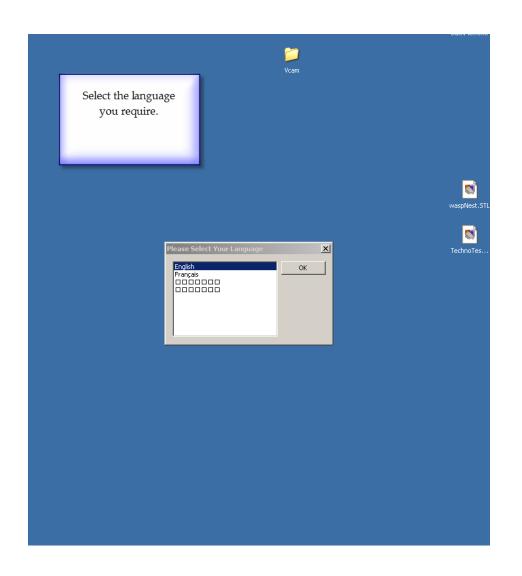

Step 1.



Step 2.



Step 3.




Step 4.




Step 5.




Step 6.

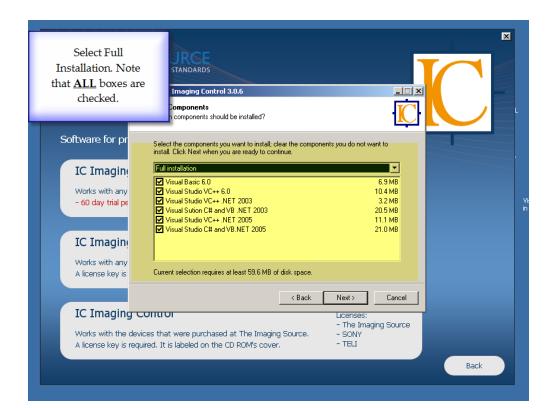

Step 7.

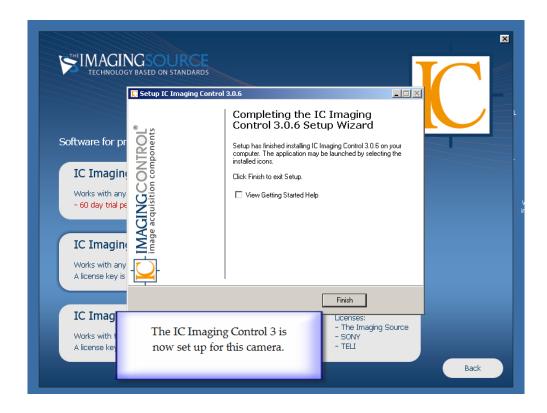

Step 8.

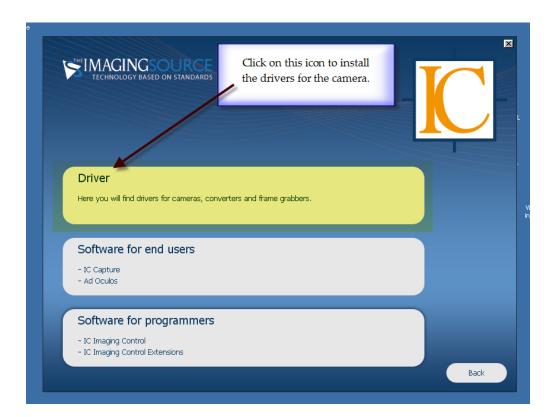

Step 9.



Step 10.



Step 11.



Step 12.



Step 13.



Step 14.