## This document will explain how to upgrade from Techno Vision Build 412 to Techno Vision Build 413.

## Step 1.



🔊 log.dat

License.rtf

🔟 demo.demo

🔟 default.cfg

🖻 default.bak

2box.nc

🔊 gcodeupdate.dll

circle and square.pdf

cameradeviceinfo.txt

CIRCLE AND SOUARE.NCD

0412 Techno Vision Systems ...

2/3/2009 3:45 PM

12/6/2006 11:14 AM

7/10/2008 4:45 PM 2/3/2009 3:42 PM

2/3/2009 3:45 PM

2/3/2009 3:43 PM

7/23/2008 1:27 PM

7/23/2008 1:28 PM

7/14/2008 9:06 PM

7/23/2008 1:33 PM

4/13/2004 3:43 PM

10 KB

74 KB

25 KB BAK File

50 KB

1 KB

1 KB NC File

Rich Text Document

Adobe Acrobat Doc...

Text Document

1.851 KB Adobe Acrobat Doc...

220 KB Application Extension

1 KB DEMO File

6 KB NCD File

CFG File

www.technorouters.com/files/vision

Copy these files to the location where the Vision System is installed.

## Step 3.



Step 4.





Step 6.

ets		
5	Software Switches	
orts em inostics	☐ Allow Feed Override	Remove Demo Mode
inced	Pause Retract Relative	Distance 0
Hardware Switches Software Switches Toolchanger Config Servo Params Spindle Control Joming Params Accel & Speed Fouchpad & Remote discellaneous	Password	Re-enter
	□ Plots □ Disable Logging	Aux IO Label
	🗆 ICP 🗖 Patriot	Spindle Label
	☐ Use LC door interlock 1: Move To Origin Before Run	<u> </u>
<u>o</u> ĸ	Cycle coolant/aux output for	pauses
	☐ Linear GoTo moves in Jog	Check here to
Cancel	Vision System enable	system.

You will now have to re-calibrate the camera. Check the Scale factor and other settings. Ensure that they are correct for the machine.